




TOYOTA PICKUP AND 4 RUNNER

1. Remove shield that is mounted between cross member and bottom of bumper.
2. Remove original equipment steering stabilizer and save nut, lock washer, and bolt from frame bracket.
3. Assemble new cylinder and pin kit as shown below.
4. Place eye ring on piston rod end of new cylinder into frame bracket. Secure using original nut, lock washer, and bolt.
5. Place pin (on barrel end of cylinder) through hole in tie rod. Install lock washer and nut.
6. Tighten nuts securely on both ends of cylinder.
7. Re-check all nuts for proper tightness before releasing installation.

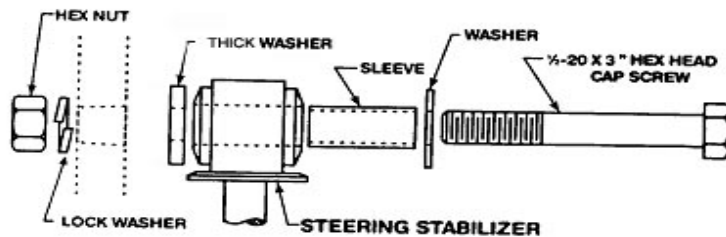

BOX CONTENT

- 1 – stabilizer cylinder
- 1 – installation instruction sheet
- 1 – pin kit

CAUTION: Any and all warranties including but not limited to any express warranties, implied warranty of merchantability, or implied warranty of fitness for a particular purpose shall not apply to any product altered in any way outside the premises of the manufacturer or to any product which is not installed in accordance with the written instructions provided by the manufacturer for installation of the product.